

Dual ground spring needle assembly

1



Align the hole on the dual GND spring towards the needle

2



**Press on the dual GND spring on the metal cylinder.
Please be aware of the sharp needle tip!**