



## Ground spring needle assembly

1

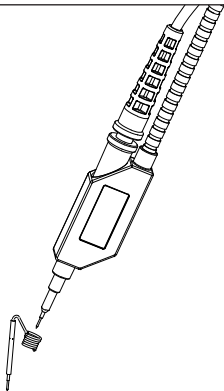

**Align the hole on the 3,5mm GND towards the needle**

2

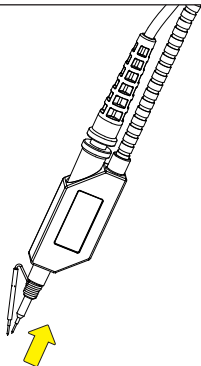

**Press and twist on the 3,5mm GND on the metal cylinder.  
Please be aware of the sharp needle tip!**