

Bottom cap replacement

1



Remove the worn out bottom cap.

2



Place the new bottom cap towards the bottom of the holder.

3



Press on the bottom cap for 10 seconds.

4



You are finished!

Insulation washer replacement

1



Remove the worn out insulation washer.

2



Pick up the new washer and press the sleeve downwards, notice the open slot.

3



Slide the washer around the pin and place the adhesive towards the surface.

4



Repeat for upper side and release the sleeve.
Your are finished!